
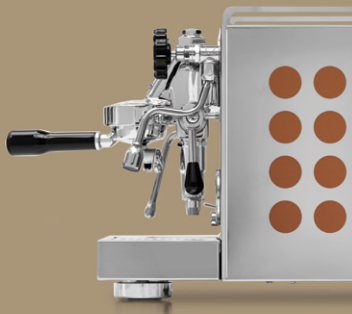


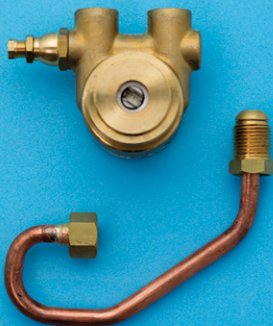

HOW TO USE YOUR
ROCKET ESPRESSO
MACHINE AND
MAKE BEAUTIFUL
ESPRESSO

Congratulations on purchasing a Rocket Espresso machine - one of the finest domestic espresso machines in the world.

Your machine is a Certified Authentic Rocket Espresso machine.

This User Manual covers the following Rocket Espresso models:

- Porta Via
- Giotto & Mozzafiato Type V
- Giotto & Mozzafiato Cronometro V
- Giotto & Mozzafiato Evoluzione R
- Giotto & Mozzafiato Cronometro R
- R 58, R CINQUANTOTTO & R 60V

**JOIN THE ROCKET ESPRESSO MOVEMENT
FOR BETTER ESPRESSO IN THE HOME.**



CONTENTS

THE FOUR 'M's

MACCHINA

How to use your Rocket Espresso machine

• General and safety information	4
• Technical specifications	8
• Accessories and parts	10
• Machine description	11
• Accessories and parts - Porta Via	14
• Machine description - Porta Via	15
• Machine installation - connecting to mains water supply (EVOLUZIONE, R-CINQUANTOTTO and R 60V ranges)	20
• Cronometro Shot Timer	23
• Connecting the remote controller - R-CINQUANTOTTO	24
• R-CINQUANTOTTO / R 60V Boiler Temperature	25
• Programming your R-CINQUANTOTTO	26
• Programming your R 60V	30
• Programming your Giotto / Mozzafiato	32
• Adjusting the group head temperature	33
• Machine operation	34

MISCELA

<i>Selecting a coffee blend to suit your espresso machine</i>	38
---	----

MACINATURA

<i>Our recommendations on a good grinder and the correct grinding of the coffee</i>	39
---	----

MANO

The skilled hand of the barista

• What is espresso?	40
• How to make beautiful espresso	41
• How to texture & pour milk	44
• Preventative maintenance & cleaning	48
• Preparing your Rocket for transportation and/or servicing	51
• Troubleshooting	53

CONTACT DETAILS

MANUFACTURER

Rocket Milano S.R.L.
Via Curiel 13
20060 Liscate
Milano
Italy



E61 group head
by Ernesto Valente

THE FOUR 'M's

Espresso coffee brewing is defined by the four 'M's: the Macinatura is the correct grinding of a coffee blend, Miscela is the coffee blend, Macchina is the espresso machine, and Mano is the skilled hand of the barista.

Once each factor of the four M's is precisely controlled, you will have prepared an espresso beverage that is the ultimate coffee experience.

If you follow our User Manual - How to Use your Rocket and Make Beautiful Espresso for step by step guidance on the four M's you will have many years of satisfaction with your Rocket Espresso machine.

MACCHINA

How to use your Rocket and make beautiful espresso.

GENERAL INFORMATION

1. This user manual is an essential part of the safe operation of your Rocket Espresso machine, therefore it is important that you read the enclosed warnings and cautions carefully. Particularly information concerning safety during installation, operation and cleaning. Please keep this User Manual in a safe place where it can be made available to all users.

REMOVING MACHINE FROM PACKAGING

1. Ensure that there are no signs of damage to the machine by checking the external cladding of the packaging.
2. Check the machine for signs of damage once the packaging has been carefully removed.
3. Retain the machine's packaging in case of future need to move, or send, the machine by courier. Keep the packaging (boxes, foam, plastic bags) well away from the reach of children.
4. If there is evidence of defect or damage to the machine, the authorized dealer from whom you purchased the machine should be notified immediately so that remedial action can be taken.

SAFETY INSTRUCTIONS

1. Check to see that the data on the rating plate corresponds to that of the main electrical supply to which the machine will be attached.
2. The installation and repair must conform to local electrical and plumbing safety codes and regulations.
3. Installation of any Rocket Espresso Milano machine must only be undertaken by duly authorized and properly trained and qualified personnel.
4. This machine is only safe when it has been correctly connected to an efficient earthing/grounding system.

5. Before connecting the machine to electric supply, ensure that the capacity and power rating is suitable for the maximum power consumption indicated on the espresso machine.
6. We do not recommend the use of accessory attachments such as adaptors, multiboards or extension cords that are not recommended by the appliance manufacturer as they may cause injury.
7. Do not use this machine if there is damage to its cord, plug or any other part or if the machine malfunctions. Return the machine to the nearest authorized service facility for examination, repair or adjustment.
8. This machine has been designed for the sole purpose of producing coffee, hot water and steam for hot beverages. All other uses are inappropriate and dangerous. The manufacturer shall not be held responsible for any damage caused by inappropriate use.
9. To protect against electric shocks when using any electrical appliance including your Rocket machine:
 - a. Do not immerse the machine itself, cord and plugs in water or other liquid and do not let the machine's internal parts get in contact with liquid.
 - b. Prevent the power cable from being stretched or pulled tight.
 - c. Do not use the machine with wet hands.
 - d. Do not allow children or untrained persons to use the machine.
 - e. Do not operate the machine when bare foot.
 - f. Fit a circuit breaker to the electric supply feeding the machine.
 - g. Do not tip liquids on top of the machine.
 - h. The machine should not be exposed to elements such as sunlight, rain, snow, extreme temperatures etc.
10. Always use Rocket Espresso certified and manufactured spare parts and accessories.
11. Before performing any cleaning (other than back-flushing) or maintenance turn the machine 'off' at the machine's power switch and disconnect the machine from the electrical supply.

12. This appliance is intended to be used in household and similar applications such as:
 - a. Staff kitchen areas in shops, offices and other working environments.
 - b. Farm houses.
 - c. By clients in hotels ,motels and other residential type environments.
 - d. Bed and breakfast type environments.
13. If the machine operates in a faulty manner, is compromised in its performance or stops working, turn the machine into the 'off' position at the machine power switch and disconnect it from the electrical supply. Do not attempt to repair it. Contact a Rocket Espresso qualified and authorized technician. Any repair must be performed by the manufacturer or by an authorized dealer using only original parts.
14. When the machine is not in use for long periods of time, the hydraulic systems should be drained completely and the machine stored in a temperature above freezing (0° or 32°F). This will prevent the hydraulic system from freezing which could damage the internal pipes and boiler.
15. The machine must be operated with soft, clean drinking water. If the local water supply has a high mineral content use a water softener. A build up of mineral deposit may restrict the flow of water within the hydraulic systems causing damage to the machine and risking personal injury. Conversely very 'pure' waters may interfere with the electronic signals read by the machine for both boiler level and water reservoir level indications. Use a filtered water.
16. If the appliance is to be connected to the water mains:
 - a. The maximum inlet pressure is 0.4MPa
 - b. the minimum inlet pressure is 0.1MPa
 - c. You must use the new hose-sets supplied with the machine do not reuse old hose-sets.
17. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
18. Unsupervised children should not play with the appliance.
19. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
20. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
21. Keep the appliance and its cord out of reach of children aged less than 8 years.
22. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
23. Children shall not play with the appliance.



TECHNICAL SPECIFICATIONS

MODEL	PRESSURE PROFILE SYSTEM	PID PRESSURE CONTROL	SHOT TIMER	TOTAL BOILER CAPACITY (litres)	WATER FEED		WATTAGE	WIDTH MM	DEPTH MM	HEIGHT MM	WEIGHT KG
					HARD PLUMBING	RESERVOIR					
R 60V	Yes	Yes	Yes	2.38 (1.8+0.58)	Yes	Yes	220-240V; 50/60 Hz; 1650W	310	440	390	29.5
R 58 / R CINQUANTOTTO		Yes	Yes	2.38 (1.8+0.58)	Yes	Yes	220-240V; 50/60 Hz; 1600W	310	440	385	29.0
Giotto Cronometro R & Evoluzione R		Yes	Yes	1.80	Yes	Yes	220-240V; 50/60 Hz; 1350W	335	420	400	27.8
Mozzafiato Cronometro R & Evoluzione R		Yes	Yes	1.80	Yes	Yes	220-240V; 50/60 Hz; 1350W	280	425	400	30.2
Giotto Cronometro V & Type V		Yes	Yes	1.80	No	Yes	220-240V; 50/60 Hz; 1350W	335	420	400	23.0
Mozzafiato Cronometro V & Type V		Yes	Yes	1.80	No	Yes	220-240V; 50/60 Hz; 1350W	280	425	400	25.4
Porta Via		Yes	No	1.20 (0.47 + 0.73)	No	Yes	220-240V; 50/60 Hz; 1350W	200*	405*	535**	29.7

ACCESSORIES AND PARTS


Check the box and packaging to ensure that the following parts and accessories are included:

1. Portafilter – double.
2. Back flush cap.
3. Portafilter – single spout.
4. Tamper.
5. Group head cleaning brush.
6. Drip tray.
7. Remote controller (R-CINQUANTOTTO and R 60V only).
8. User Manual – How to use your Rocket Espresso Machine and Make Beautiful Espresso.
9. Cup frame surround.
10. Polishing cloth (not shown).
11. How to Guides USB stick (not shown).




MACHINE DESCRIPTION

1. Steam valve handle. Turn left/anti clockwise to open steam. Turn right/clockwise to close steam.
2. Steam wand for steaming milk. Caution, can become hot and cause burns.
3. Boiler pressure gauge. Boiler pressure should be around 1 bar when machine is ready.
4. Machine's on/off switch. Position '0' = off; position '1' = on.
5. Control lamp - machine is 'on' when lamp is illuminated. The light flashes when the water reservoir is low.
6. Brew group head. Caution, group head is very hot when machine is on and can cause burns.
7. Portafilter. Caution, its metal parts can become hot and cause burns.
8. Brewing group head's progressive infusion piston. Unloads hot water into drip tray once brewing process is terminated. Caution: its metal parts can become very hot and cause burns. Attention to hot water flow coming out beneath after brewing process is terminated.

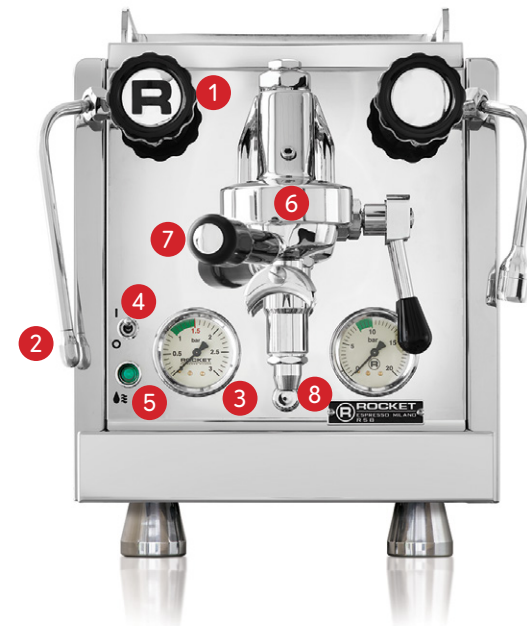

MACHINE DESCRIPTION continued...

9. Lever for brewing process control. When the lever is down the brewing is 'off'. Caution: its metal parts can become very hot and cause burns, always hold by the black handle.
10. Drip tray and grid.
11. Hot water wand. Caution: can become very hot and cause serious burns.
12. Hot water handle. Turn left to open. Turn right to shut.
13. Cup frame.
14. Cup tray. Caution: Do not pour liquid on this tray. It will filter inside the equipment and can cause electrical shocks & serious injuries.
15. Pump pressure gauge.
16. Water reservoir.
17. Braided hose (R-CINQUANTOTTO, R 60V and Evoluzione R models only).

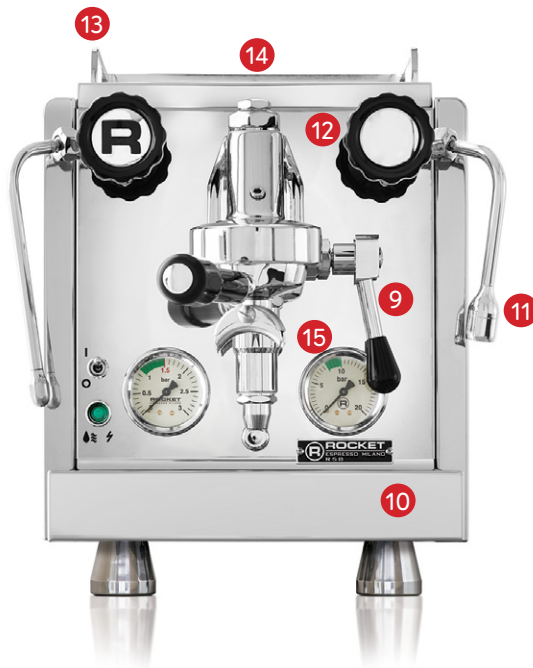

ACCESSORIES AND PARTS - PORTA VIA

Check the box and packaging to ensure that the following parts and accessories are included:

1. Water reservoir and lid
2. Portafilter - bottomless only
3. Backflush cap
4. 2 x cups
5. 2 x saucers
6. Tamper
7. Drip tray and grid
8. User manual
9. Power cord (not shown)



MACHINE DESCRIPTION - PORTA VIA

1. Steam valve handle. Turn left/anti-clockwise to open steam. Turn right/clockwise to close steam.
2. Steam wand. For steaming milk. **Caution:** can become hot and cause burns.
3. Boiler pressure gauge. Boiler pressure should be around 1 bar when machine is ready.
4. Machine's on/off switch.
5. Control Lamp - machine is on when lamp is illuminated. The light flashes when the water reservoir is low.
6. Brew group head. **Caution:** group head is very hot when machine is on and can cause burns.




MACHINE DESCRIPTION - PORTA VIA...

7. Brewing group head's progressive infusion piston. Unload hot water into drip tray once brewing process is terminated.
Caution: its metal parts can become very hot and cause burns. Attention to hot water flow coming out beneath after brewing process is terminated.
8. Lever for brewing process control etc.
9. Water reservoir and lid.
10. Cup tray. Caution: do not pour liquid on this tray. It will filter inside the equipment and can cause electrical shocks and serious injuries.

NB. THE MACHINE MUST REMAIN UPRIGHT DURING TRANSPORTATION AFTER IT HAS BEEN USED SO THAT IT DOES NOT LEAK WATER.



3

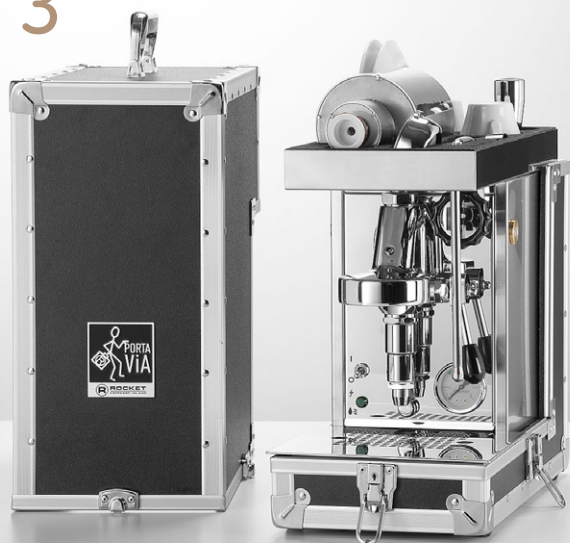

Fit the drip tray grid onto the drip tray.


5



Place the reservoir into the top of the machine with a firm downward push.
Fill with water.
Fit the cover on the top.




4

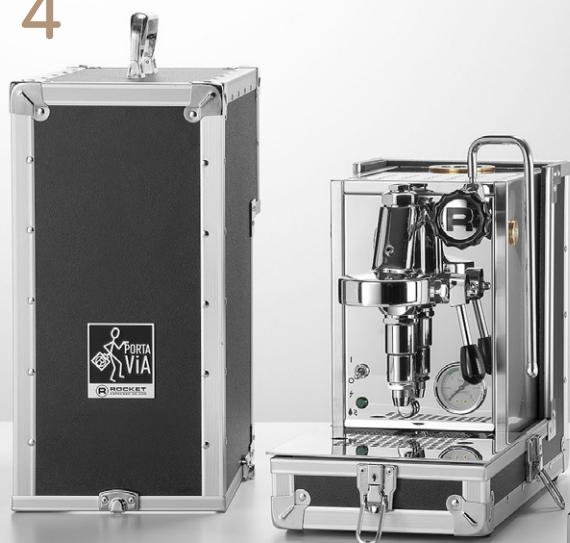


Remove the accessory box from the top of the machine.

6

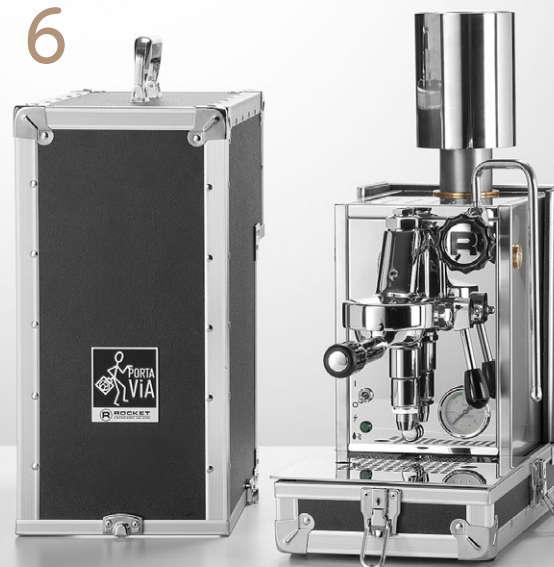

Place the portafilter into the brew group head.
Connect the power cable to the back of the machine and plug into a power source.

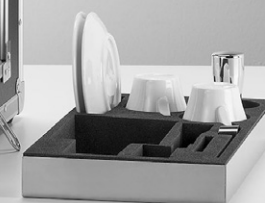

MACHINE INSTALLATION

CONNECTING TO MAINS WATER SUPPLY - EVOLUZIONE R, R-CINQUANTOTTO and R 60V RANGES ONLY

The Rocket Espresso Evoluzione R, R-CINQUANTOTTO and R 60V ranges are built with full commercial rotary pumps. This feature enables the user to connect the machine directly to the mains water supply.

The Evoluzione model range is preset at the factory to use the supplied 2.0 litre water reservoir.

The R-CINQUANTOTTO and R 60V controllers are preset to source water from the machines water reservoir.

To connect the Evoluzione, R-CINQUANTOTTO or R 60V machine to mains water supply, use the steel braided water hose provided and ensure the following instructions are adhered to:

1. Use a certified plumber to complete the installation and ensure that the installation meets local authority standards and regulations in all cases.
2. Line pressures exceeding 5 bars should be limited with the use of a pressure-regulating valve on the water feed line.
3. Use a shut off valve to isolate the water supply to the machine.
4. If you are drawing water from a non-pressurised system (ie. from a remote water supply tank, not mains pressurised) fit a non-return valve to the end of the water supply hose to ensure that the line pressure is maintained at all times.
5. Use an inline filter to ensure the water supply to the machine is of the highest quality (example: BWT filter range).

Fig A. Once mains installation is complete it will be necessary to switch the machine from water tank supply to mains pressure supply.



6. For the Evoluzione refer to Fig A. Remove the water reservoir tank from the machine, move the switch from the water tank icon position to the water tap icon position. In the case of the R-CINQUANTOTTO or R 60V please see 'Programming your R-CINQUANTOTTO or R 60V' sections.
7. Mains water supply will result in a different line pressure to the machine. It will therefore be necessary to adjust the pump pressure for optimum extraction results. Fit the blind filter into the portafilter and insert the portafilter tightly to the group head.
8. Open the group lever (as if to make coffee) and take note of the maximum pump pressure reading (pump pressure is the right hand gauge). Pump pressure should be at 9 bar. Close the group lever to release pressure.

Fig B. Pump Pressure adjustment lock ring (black colour).




9. Should the pump pressure require adjusting, it is externally adjustable from under the machine (Fig B). With care using a 14mm socket loosen the pump pressure adjustment lock ring.
10. Using a short screwdriver to adjust the pump pressure. With the pump running, turn the screw (brass colour) whilst observing the pump pressure until the required 9 bar pressure is achieved. Turning anti clockwise will decrease the pressure, clockwise will increase the pressure.
11. Re-tighten the lock ring.
12. The procedure is now complete. Follow the rest of the installation guidelines on the next page except for step 2 (filling the water reservoir).

MACHINE INSTALLATION - ALL MODELS

1. Ensure the machine is unpackaged and placed on a hard and stable surface near an adequate power supply.
2. Remove the water reservoir cover and fill the reservoir with filtered water, pouring from a very clean water jug with a spout that is easy to pour from. Be careful to pour water into the water reservoir only (to remove the reservoir for cleaning see maintenance instructions). Replace the cover of the water reservoir.
3. Connect machine to power supply that is rated in accordance with the serial plate on the espresso machine.
4. Turn the on/off switch (4) to the 'on' position '1' and open the steam handle (1). Boiler water fill begins - you will hear the pump's noise.
5. When the boiler is properly filled with water, the pump will stop (you can tell this as the noise will cease). Now close the steam handle (1).
6. The heating up of the boiler begins.
7. Wait until the boiler pressure gauge (3) reads approximately 1 bar.
8. Now open the steam handle (1) for 5 seconds to allow some steam to release. This operation is very important as it removes a possible vacuum inside the boiler which could result in the suction of milk inside the boiler once starting to steam milk. Close the steam handle (1) again.
9. Wait until the boiler pressure gauge (3) reaches 1 bar again.
10. Lift the brew lever (9) completely up.
11. Release a cup of hot water from the brewing group head (6) for the first use only.
12. Push the brew lever (9) down completely to stop water from flowing.
13. Now the machine is ready for operation.
14. Allow 15-18 minutes warm up time so the group head is thoroughly heated - the quality of the espresso will be much better with a hot group and hot portafilter handle.

CRONOMETRO SHOT TIMER

Visual reference guide for shot timer display on Cronometro Type V and Evoluzione R models (Figure 1).

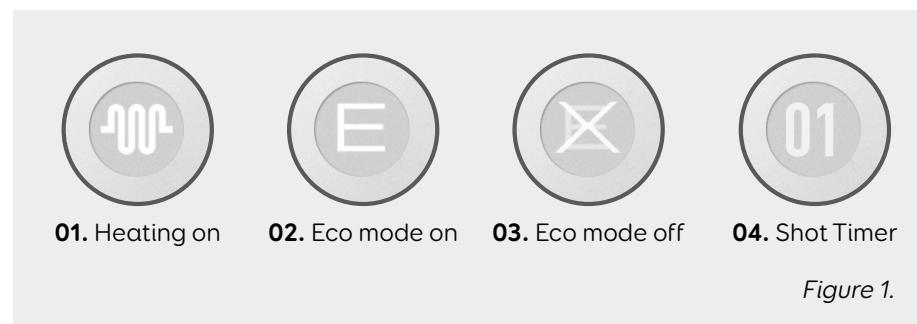


ECO MODE

When the machine is in Eco mode it will turn off after 90 minutes from the last shot. To exit ECO mode lift the lever on the group up and down and the machine will start to reheat.


ECO MODE - CRONOMETRO

The Eco mode on/off button on Cronometro machines is located underneath the machine (Figure 2). Check Eco mode status by viewing the symbol on the Cronometro shot timer display (Figure 1).

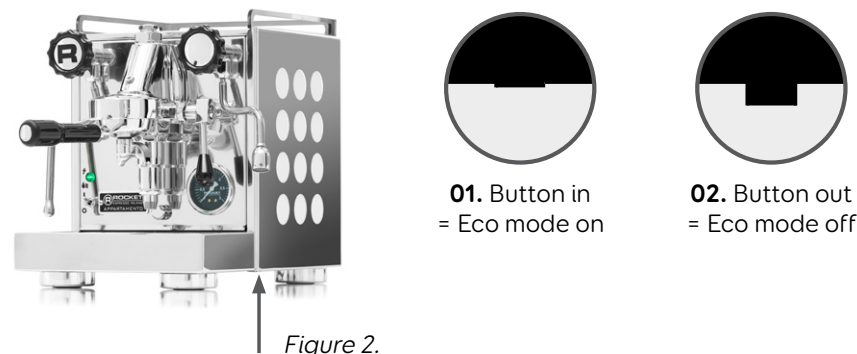

CONNECTING THE REMOTE CONTROLLER

To connect the remote controller to your R-CINQUANTOTTO machine follow the diagram and instructions below.

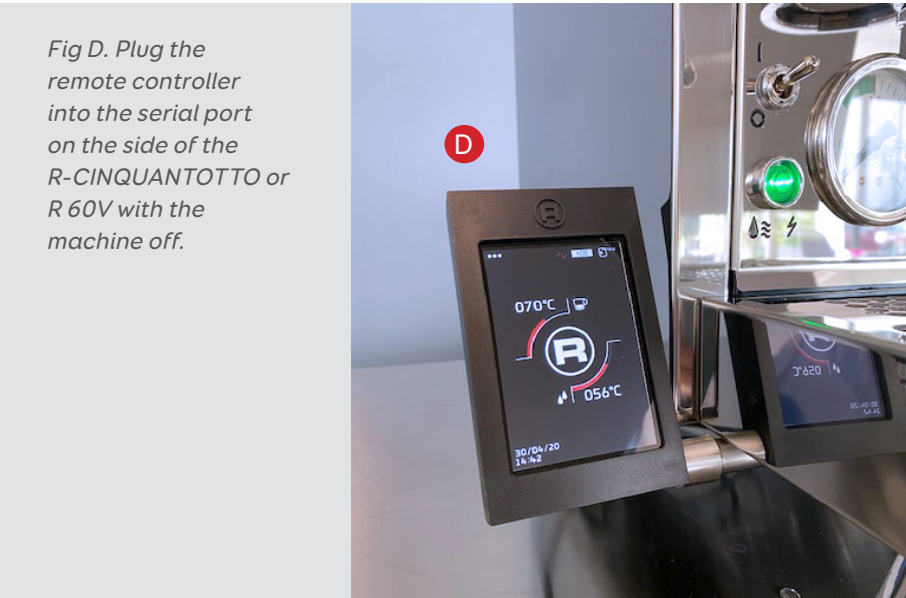

1. Ensure the machine is off (turn the on/off switch to position “0”).
2. Plug the cable into the socket at the base and side of the machine (Fig D).
3. You can now turn the machine on (on/off switch to position “1”).
4. Do not connect and disconnect the remote controller unless the machine is switched OFF.

Attention! The USB connector must be used exclusively to connect the display (remote controller) and absolutely for nothing else. Otherwise the machine’s electronics will be seriously damaged and warranty will become void.

R 60V BOILER TEMPERATURE

Modern coffee roasting companies, cafes and professional baristas have very precise brewing preferences for their coffees. Specific blends, single origins and roast profiles can perform better at incrementally different temperatures.

Rocket Espresso machines measure the *exact boiler temperature and display that reading on the controller. The table below shows the boiler temperature and the corresponding group head temperature.

°C		°F	
DISPLAYED BOILER TEMPERATURE	BREW GROUP TEMPERATURE	DISPLAYED BOILER TEMPERATURE	BREW GROUP TEMPERATURE
103°C	90.8°C	217.4°F	195.4°F
104°C	91.7°C	219.2°F	197.1°F
105°C	92.0°C	221.0°F	197.6°F
106°C	93.5°C	222.8°F	200.3°F
107°C	94.6°C	224.6°F	202.3°F
108°C	95.3°C	226.4°F	203.5°F
109°C	96.2°C	228.2°F	205.2°F

- Most espresso machines measure the water temperature used for the extraction in the brew boiler. The boiler temperature reading is then converted into a group head extraction temperature. This information is misleading and inaccurate as the digital readout on many machines does not display the real temperature at the group, rather the temperature the manufacturer wishes the user to see.
- Rocket Espresso measures and displays boiler temperature. The table above indicates ‘real’ group temperature through precise measurement using the SCACE meter.

PROGRAMMING YOUR R-CINQUANTOTTO

Your R-CINQUANTOTTO machine is factory set to optimum working parameters. Nevertheless you can set your personal parameters using the touch display that you can connect to your machine.

It is important that the R-CINQUANTOTTO is turned OFF when connecting or disconnecting the remote controller display. If you are using the machine with the remote controller attached ensure that the display is properly connected to the machine.

FACTORY SETTINGS OF YOUR MACHINE

Prior to delivery your Rocket R-CINQUANTOTTO espresso machine has been tested. The factory settings mean that your machine is set and ready for use. Please find here below the settings. To change the settings please refer to the user instructions.

- Operation: Pour over (water reservoir)
- Service boiler: Heating on, set to 123°C
- Coffee extraction temperature: The temperature of the coffee water is set to 92 °C


NB. You can change the coffee extraction temperature, the machine will automatically change the temperature of the brew boiler to reach the requested extraction temperature.

HOW TO USE THE TOUCH DISPLAY

The touch display is simple and intuitive to use. In the following section there are detailed instructions on how to make the most of it.


HOME PAGE

On this page is all the information regarding the machine status:

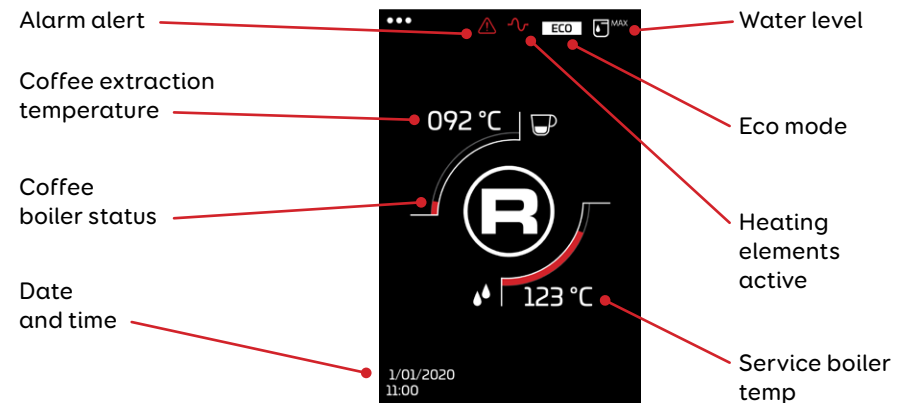

MENU PAGE


In the menu page you can change the machine settings:

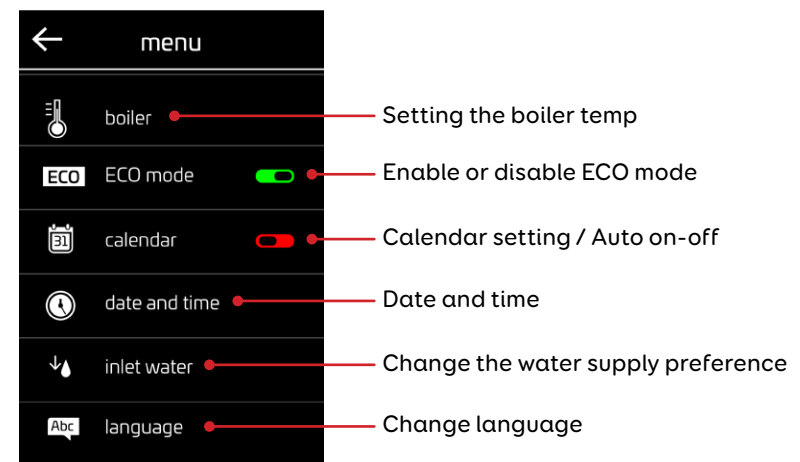

Note: With the ECO MODE on, the machine will go in stand by after 90 minutes from the last shot. To exit from ECO MODE lift the group lever up, then down.

BOILER MENU


In the boiler menu you can change the temperature, the unit of measure and the turn the service boiler (steam/hot water) on or off:

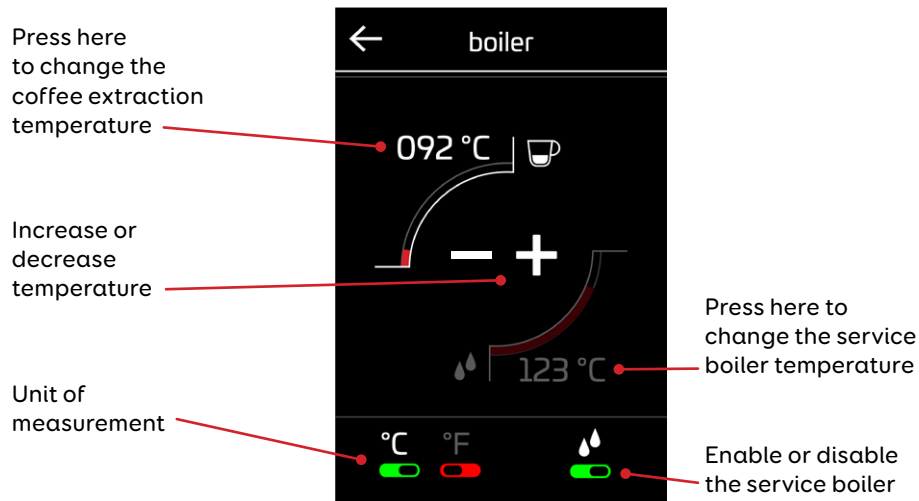

CALENDAR

The calendar page functions allow you to turn the the machine on and off automatically at set times. You can set two time slots a day to allow the machine to be ready when you need it.

For the calendar function to operate the machine power switch must be left on:

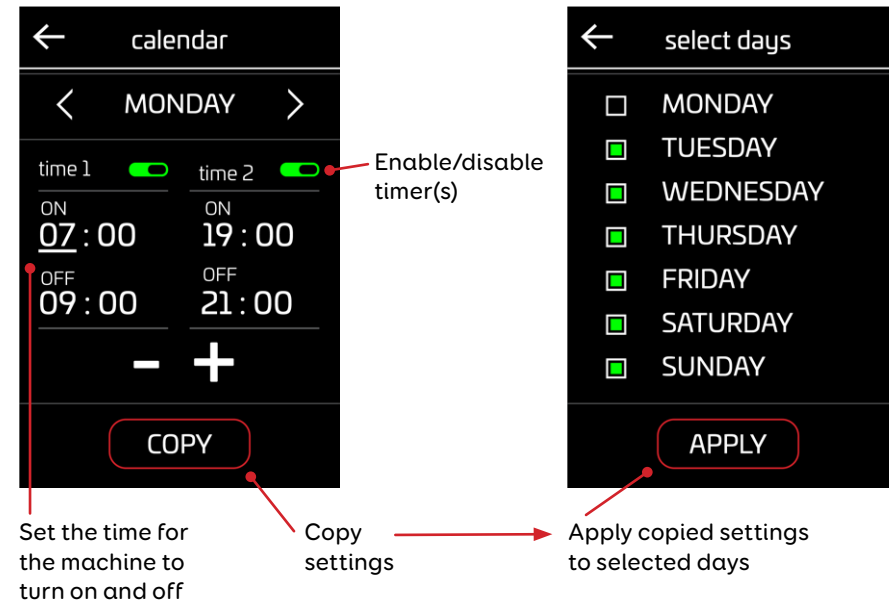

To wake the machine from Auto on/off or ECO modes do the following:

Auto on/off mode: to exit the auto on/off mode press the R on the touchscreen or lift the group lever up/down.

ECO mode: to exit ECO mode lift the group lever up/down.

PROGRAMMING YOUR R 60V

Your R 60V machine is factory set to optimum working parameters. Nevertheless you can set your personal parameters using the remote controller (with display) that you can connect to your machine.

It is important that the R 60V is turned OFF when connecting or disconnecting the remote controller display. If you are using the machine with the remote controller attached ensure that the display is properly connected to the machine.

FACTORY SETTINGS OF YOUR MACHINE

Prior to delivery your Rocket R 60V espresso machine has been tested. The factory settings mean that your machine is set and ready for use. Please find here below the settings. To change the settings please refer to the user instructions.

- Operation: Pour over (water reservoir)
- Service boiler: Heating on, set to 123°C
- Brew boiler: The temperature of the coffee water brew boiler is set to 105 °C

R 60V PRESSURE PROFILE SETTINGS

- Pressure Profile A
6" - 4 Bar
18" - 9 Bar
6" - 5 Bar
- Pressure Profile B
8" - 4 Bar
22" - 9 Bar
- Pressure Profile C
20" - 9 Bar
10" - 5 Bar

You can change the settings of the following parameters:

1. Language.
2. Hard plumbing to mains supply or machine water reservoir.
3. Service boiler on/off. The service boiler provides steam and hot water. If you use your or R 60V for espresso only you can turn the heating of this boiler off, so that only the coffee water boiler will be heated.
4. Temperature unit: °C or °F.
5. The coffee water boiler's temperature is factory set to 105° C which reflects an extraction of around 92°C. You can set the temperature anywhere between 95°C and 115°C.
6. The temperature of the service boiler is factory set to 123°C. You can set the temperature to anywhere between 110°C and 126°C.
7. R 60V only - You are able to set 3 pressure profiles.
8. Program Auto On.
9. Set Eco Mode.

PROGRAMMING YOUR GIOTTO OR MOZZAFIATO

Modern coffee roasting companies, cafes and professional baristas have very precise brewing preferences for their coffees. Specific blends, single origins and roast profiles can perform better at incrementally different temperatures.

Rocket Espresso machines measure the *exact boiler temperature and display that reading on the controller. The table below shows the boiler temperature and the corresponding group head temperature.

°C		°F	
PID DISPLAYED BOILER TEMPERATURE	BREW WATER TEMPERATURE MEASURED USING SCAE	PID DISPLAYED BOILER TEMPERATURE	BREW WATER TEMPERATURE MEASURED USING SCAE
118°C	90.4°C	244.4°F	194.72°F
119°C	92.75°C	246.2°F	198.95°F
120°C	93.6°C	248.0°F	200.48°F
121°C	95.1°C	249.8°F	203.18°F
122°C	96.08°C	251.6°F	204.95°F

ADJUSTING THE GROUP HEAD TEMPERATURE


1. Turn off the machine.
2. Remove the drip tray and portafilter.
3. Turn the machine on.
4. The display will initially show the software version and then immediately show the boiler setting temperature.
5. To change the boiler temperature, press and hold key **A** until the display reads PrG. Keep holding key **A** down while pressing key **B**.
6. Then adjust temperature up or down by pressing key **A** or **B**. After 3 seconds it will memorise and display the temperature you keyed in.



- Most espresso machines measure the water temperature used for the extraction in the brew boiler. The boiler temperature reading is then converted into a group head extraction temperature. This information is misleading and inaccurate as the digital readout on many machines does not display the real temperature at the group, rather the temperature the manufacturer wishes the user to see.
- Rocket Espresso measures and displays boiler temperature. The table above indicates 'real' group temperature through precise measurement using the SCACE meter.

MACHINE OPERATION - ALL MODELS

1. Install the portafilter by inserting it into the group head and rotate the portafilter handle from left to right. The portafilter is inserted properly once it is firmly inside the group head and the portafilter handle is sitting at 90 degrees from the face of the machine (Fig G).

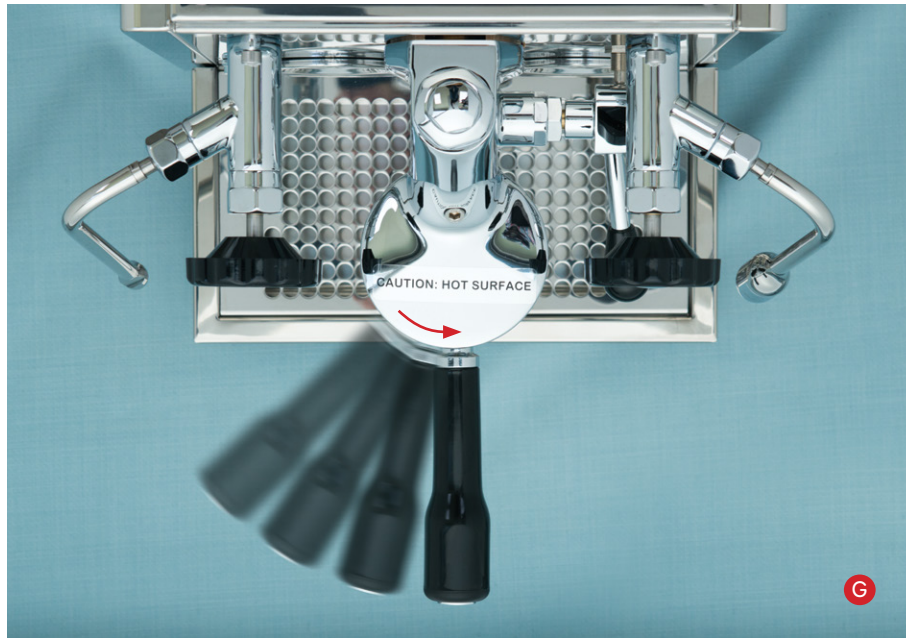

2. You can now lift the brew lever to start the water flow through the portafilter.
3. It is important to leave the portafilter installed in the group head when not in use. The portafilter must remain heated for a successful brew process. It will also prevent the head seal inside the group head from drying out prematurely.
4. Single (with one spout) and double (with two spouts) portafilter handles come ready assembled with single and double baskets fitted.

5. You are now ready to start brewing coffee by removing the portafilter and placing ground coffee inside the filter basket. Press down on the coffee with the supplied tamper and install the portafilter in the group head. Lift the group lever upwards to release heated water and start the brewing process.
6. To stop the brewing process it is important that the brew lever is positioned down completely to where the water stops flowing AND where the pump's noise can no longer be heard (Fig H).




Fig H. Brew lever completely down, water not flowing and pump off.



Fig J. Brew lever on and heated water flowing.

7. R 60V - the green light on the pump pressure manometer will be on when the extraction starts. Once the profile has finished the light will flash to indicate the program has been completed. The display unit will indicate shot time throughout the extraction process.

8. To heat milk dip the steam tip (2) under the surface of the milk which is contained in a stainless milk jug. Release heat into the milk by turning the steam handle (1) anti-clockwise, so the valve is fully open. Once at a good temperature for consumption turn steam wand off completely by turning tightly clockwise. Remove jug from under the steam wand.
9. In order to prevent heated milk from being sucked into the boiler it is recommended that you purge the steam wand after heating milk. Purge by releasing steam for a few seconds into the atmosphere.
10. To dispense hot water from the hot water tap (11) turn the handle (12) anti-clockwise and release the required amount of water into a cup or vessel. Turn the handle clockwise to stop the hot water from running. CAUTION THE WATER IS VERY HOT.
11. More details of brewing coffee and steaming milk are outlined in the Mano section of this Rocket Espresso handbook.

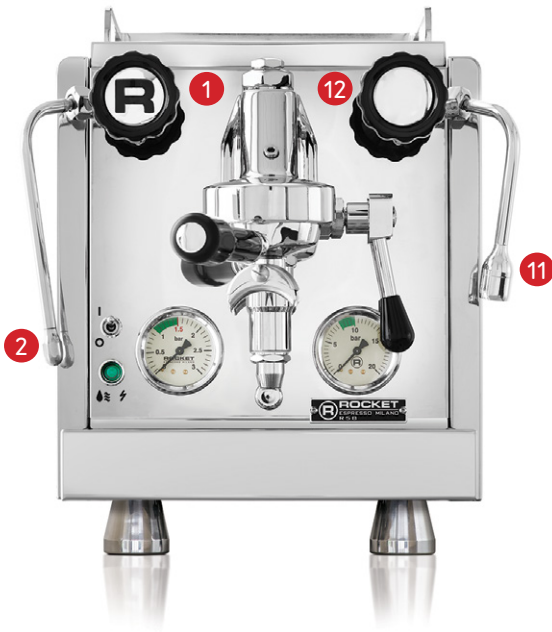

MISCELA

The coffee blend

1. Ideally coffee beans should be consumed between three and fourteen days from roasting. In the first three days the beans are still releasing carbons from the roasting process.
2. From fourteen days the coffee will start to lose its flavor characteristics to become old and stale tasting.
3. Store your coffee beans in an airtight container in a cool dark place. Do not refrigerate or freeze.
4. Blending is to combine coffees from two or more countries of origin.
5. Espresso coffee should be a harmonious blend of sweetness, acidity and bitterness.
6. Espresso roasts tend to be slightly darker than filter or French Press roasts as a darker profile emphasizes body and sweetness.



MACINATURA

The grinding of the coffee blend

1. An espresso grind is a very fine grind yet still granular.
2. Coffee loses its flavor rapidly once ground therefore only grind as much as is needed for the next espresso beverage.
3. Temperature, humidity and wearing of the grinder burrs all affect the accuracy of the grind setting, therefore each morning you may find you need to 'dial-in' your grinder (make the grind setting coarser or finer) This will be the difference between good coffee and great coffee.
4. It is important to have a good burr grinder with a fully adjustable grind setting.



MANO

The skilled hand of the barista

What is espresso?

- Espresso is a 25-30ml (50-60ml for a double) beverage prepared from 7-9 grams (14-18 grams for a double) of coffee through which clean water of 90.5 °-96.1°C has been forced at 9-10 atmospheres of pressure, and where the grind of the coffee is such that the brew time is 20-30 seconds.
- While brewing, the flow of espresso will appear to have the viscosity of warm honey and the resulting beverage will exhibit a thick dark, golden crema. Espresso should be prepared specifically for, and immediately served to its intended consumer (as defined by the Specialty Coffee Association).



HOW TO MAKE BEAUTIFUL ESPRESSO

1. Place fresh coffee grounds into the portafilter basket until full or overflowing.
2. Knock the handle on the tamping mat once to settle the grounds.
3. Evenly distribute the grounds to a level flush with the rim of the filter basket. Release any excess grounds back into the doser hopper.
4. Compress the grounds with a tamper, pressing firmly, then twist the tamper to smooth the surface of the grounds. Tamp pressure should be around 30kg so the applied pressure should be very firm.



Continued over page...

HOW TO MAKE BEAUTIFUL ESPRESSO CONTINUED...

5. Insert the portafilter into the group head and activate the pump immediately by lifting the brew lever.
6. Observe the flow.
7. Liquid volume should be 50-60ml in 20-30 seconds (from the double handle or 25-30ml in 25-30 seconds if using the single basket. Stop the pump appropriately.
8. Serve immediately or combine with milk to prepare an espresso based beverage.
9. Remove portafilter and knock out spent coffee.
10. Wipe filter basket clean and flush group head.
11. Return portafilter to group head to keep portafilter heated.

FLOW RATE & GRIND SETTING


- Ensure that your dosing and tamping is consistent.
- Good extraction is characterised by a 5-10 second delay before any coffee will pour. Heavy droplets will appear and develop into a thick, straight and even pour. The colour will be dark brown or hazelnut, preferably with a reddish reflection (see page 33).
- The pour should be cut off before the colour lightens and the pour begins to curl in.
- If the flow is too fast (another sign is a pale crema and white streaks) then adjust your grind to make it finer.
- The finer the grind the slower the extraction. The coarser the grind the faster the extraction.
- If the flow rate is too slow, adjust your grind setting to make it coarser.
- Correct grind equals correct extraction equals correct flavour.



HOW TO TEXTURE MILK

1. Half fill your stainless milk jug with fresh cold milk. Use a 250ml jug if you are preparing milk for one milk coffee. Use the 500ml jug if preparing two milk coffees.
2. Purge the steam wand of condensation by quickly releasing steam into the atmosphere for a few seconds
3. Place the steam wand nozzle just under the surface of the milk and to the side. Turn the steam pressure on fully. You should hear a sipping type sound which is the sound of the milk increasing in volume. The milk should also be swirling in a whirlpool motion which folds out the air bubbles and improves the texture of the heated milk.
4. Keep the jug steady so that large bubbles do not develop.
5. You are aiming to stretch the half a jug of milk to three-quarters full and to have a dense and satisfying microfoam texture
6. Turn off the steam pressure when the milk is about 65° or the milk jug is just too hot to touch.
7. Remove the milk jug, clean the steam wand with a wet cloth and purge the wand of any milk residue.
8. If there are any large surface bubbles, give the jug a heavy knock on the bench. Swirl the milk jug in a circular motion to reveal a gloss-like appearance. The milk is now ready to pour. Do not delay or the texture will separate in the jug.

MILK TEXTURING

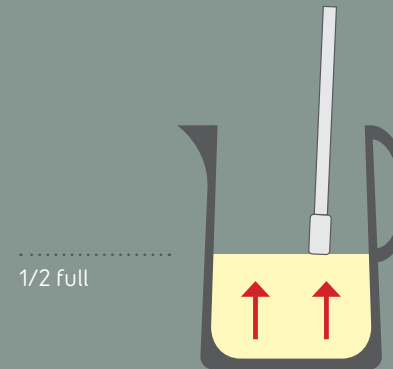


There are three parts to texturing milk. They should be done simultaneously: stretch, swirl and heat.

STRETCH


The air must be folded into the milk to stretch it. Place the nozzle just below the surface of the cold milk and turn the steam wand on, releasing its full pressure. As the milk warms and grows, the nozzle should be kept at the top of the milk surface to continue the stretch.

When the volume of the milk has increased by half, the nozzle can remain below the surface of the milk.

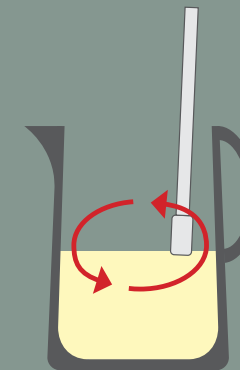

SWIRL

Place the steam wand to the side of the jug. This creates a swirling motion in the milk, which keeps the milk nicely blended and smoothes out any bubbles.

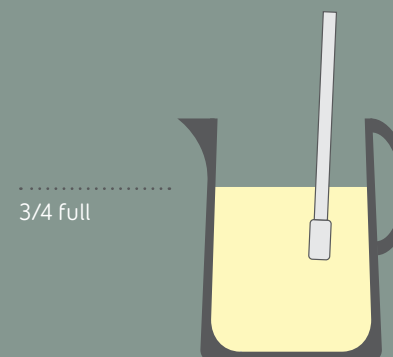

HEAT

Turn off the steam wand when the milk has reached 60-65°C. You should be able to touch the bottom of the jug, but not hold for any longer than a couple of seconds. If there are any large bubbles, give the jug a heavy knock on the bench to remove them. If there are still a few bubbles, skim off the top couple of millimetres with a spoon.

Swirl the jug to reveal a glossy sheen. Now the milk is ready to pour.

HOW TO POUR HEATED MILK

1. Start by pouring the heated milk gently into the centre of the crema ensuring that the crema stays intact.
2. Once the espresso and milk is nicely combined and the volume in the cup is about half full, speed up the pouring process by taking the spout closer to the cup and increasing the angle on the pour.
3. Keep the jug as close to the surface of the beverage as possible. Rock the jug side to side to release the heavier textured milk into the cup. This is how one creates shapes and patterns in the cup.



ESPRESSO MENU



RISTRETTO

- 90ml demitasse
- 20ml restricted double shot



FLAT WHITE

- 150ml cup
- 40ml double shot
- 110ml lightly textured hot milk




ESPRESSO

- 90ml demitasse
- 40ml double shot



CAFFÈ LATTE

- 220ml glass or cup
- 40ml double shot
- 180ml lightly textured hot milk

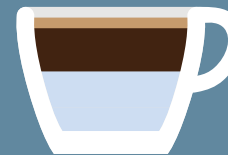


LONG BLACK

- 150ml cup
- 80ml hot water
- 40ml double shot



PICCOLO LATTE

- 100ml glass
- 20ml restricted double shot
- 80ml lightly textured hot milk

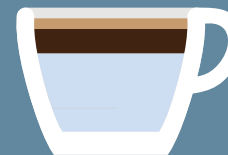

AMERICANO

- 300ml cup
- 220ml hot water
- 40ml double shot



CAPPUCCINO

- 150ml cup
- 40ml double shot
- 110ml heavily textured hot milk



MACCHIATO

- 90ml demitasse
- 40ml double shot
- a splash of textured hot milk



MOCHACCINO

- 190ml cup
- Chocolate powder or syrup
- 40ml double shot
- a splash of textured hot milk



LONG MACCHIATO

- 150ml cup
- 80ml hot water
- 40ml double shot
- a splash of textured hot milk



AFFOGATO

- 300ml cup
- Scoop of vanilla ice cream
- 40ml double shot

PREVENTATIVE MAINTENANCE & CLEANING

Keeping your machine clean will prolong its life and produce much better espresso beverages.

STEAM NOZZLES

1. Clean the steam nozzle after every use by wiping with a damp cloth. Turn the steam wand on to release condensation and milk residue.
2. If the steam jets get blocked with dry milk use a paper clip to unclog them.

BACKFLUSHING

1. Remove the filter basket from the portafilter and fit the back flush cap.
2. While the brew water is flowing loosely insert the portafilter into the group head, rotating the portafilter back and forth. Keep emptying the blind basket of hot water and old grounds until the water runs clear.
3. You should backflush the group head every day.

GROUP BREW HEAD

1. Every week, after backflushing, add a small amount of espresso cleaning detergent to the blind basket. Dissolve the detergent in hot water and insert the portafilter into the group head. Use a solution readily available at your local store.
2. Turn the brew lever on and off again after about 10 seconds. Repeat this several times.
3. Empty the basket of the detergent and backflush using water only as above until the group is thoroughly cleansed of detergent residue.

REMOVING THE SHOWER FOIL AND HEAD SEAL

1. Use the rounded end of a 12mm ring spanner to lever out the shower foil and head seal.
2. Unscrew the brass spreader inside the group using a short blade screwdriver.
3. Scrub the inside of the group head with the supplied group cleaning brush.
4. Using a damp cloth wipe clean the area where the portafilter engages into the group head.
5. Soak the metal parts that have been removed (shower foil, brass spreader) in a solution made from 2 teaspoons of espresso cleaning detergent and hot water. Soak for 10 minutes. Rinse thoroughly, wipe clean and return.
6. Use the portafilter to refit the shower foil, which sits on top of the head seal, into the group head. The chamfer on the seal should face up.
7. When the head seal becomes brittle or the shower foil gets punctured, they will need to be replaced. These items are consumables. Contact your authorized Rocket Espresso dealer.

PORTAFILTER

1. Remove the filter basket from the portafilter handle using a small screwdriver or the under-side of the blind basket.
2. Wipe the inside of the basket and portafilter clean with a damp cloth.
3. If the coffee oils have built up soak the metal end of the portafilter and basket in the same detergent solution as the shower foil and brass spreader above.
4. Rinse thoroughly, dry and return.

WATER RESERVOIR

1. Remove and clean the water reservoir periodically with warm soapy water. To remove the reservoir, take off the reservoir cover and lift the reservoir up by the two black handles – a firm upwards movement.
2. When returning the reservoir, ensure you press down firmly so that the tank plug at the bottom is fully engaged.
3. Use fresh, filtered water to fill the reservoir. Do not use distilled water.

DRIP TRAY

1. Remove the drip tray and wash with hot soapy water. Rinse, dry and return.

BODYWORK

1. Wipe the stainless steel surfaces with a soft, non-abrasive and damp cloth. Polish using a dry, soft cloth. The Rocket Espresso supplied stainless steel cloth is best for the cleaning of your machine body work. We do not recommend using any of the commercial stainless steel cleaners.

DESCALING

1. Rocket Espresso do not recommend descaling your espresso machine.
2. Many of the chemicals used to descale espresso machines are particularly aggressive. These chemicals can cause internal corrosion of hard metals used in the construction of the machine.
3. Additionally it is very difficult to remove all the descaling solution from the machine once the procedure is completed.
4. Control the quality of the water you use in the machine, always using a filtered water. Distilled water may lack the necessary conductivity required for various electronic functions needed in the operation of the machine.
5. Additionally where possible try to use the Rocket Espresso reservoir filter.

PREPARING YOUR ROCKET FOR TRANSPORTATION AND/OR SERVICING

1. While your machine is on, remove the water reservoir and empty it of water.
2. Turn off the machine.
3. Place a one litre metal jug under the hot water spout and turn on hot water tap until it is emptied of contents. This will be when one litre of water is released.
4. If your machine is not working you will not be able to empty the boiler, but should still empty the water reservoir and return to the machine.
5. It is best to transport your machine in the original box. If not, you can make one that is as good.
6. Source a thick cardboard box that is all around 5cm larger than your machine.
7. Cut a flat piece of polystyrene (at least 5cm thick) to fit bottom of the box.
8. Place machine on polystyrene and wiggle machine to make imprints where the feet sit.
9. Remove and cut holes for the feet so that the machine sits flat on the bottom of the box.
10. Use more polystyrene to line the rest of the box.
11. If transporting for servicing, ensure your full contact details are included inside the box.
12. Your Rocket Espresso machine weighs in excess of 30KG and can be easily damaged when shipped in a cardboard box. Every precaution should be taken to ensure its safety.

CONTACT DETAILS

MANUFACTURER

Rocket Milano S.R.L.
Via Curiel 13
20060 Liscate
Milano
Italy

The retail outlet or local distributor that you purchased this Rocket Espresso Milano machine should be your first point of contact for all **service and warranty** enquiries about your machine.

AUTHORISED ROCKET ESPRESSO MILANO DISTRIBUTOR CONTACT DETAILS

- Company name:
- Address:
- Phone number:
- Machine model purchased:

For all **technical questions** that can not be answered by your dealer please visit rocket-espresso.com 'where to buy' and use the online support form submitting all the details regarding your machine.

For all **authorised Rocket Espresso dealers** worldwide please visit the Dealers page at www.rocket-espresso.com

TROUBLESHOOTING

EXTRACTION IS TOO FAST

- Check the filter basket is not under-dosed.
- Check the grind is not too coarse.

EXTRACTION IS TOO SLOW

- Check the filter basket is not overfull.
- Check the grind is not too fine.
- Check the shower foil is not blocked - it may need to be back flushed or removed and cleaned.
- Check the spout of the handle is not blocked. If it is dirty with rancid coffee oil, it will need to be soaked in a solution of espresso head cleaning shampoo and water.

WATER ESCAPING FROM AROUND THE HANDLE

- Check the head seals. If they have dried out, they will need to be replaced.
- Ensure the group handles are kept in place whenever the machine is not in use, as this will help to protect the seals.

ESPRESSO TOO COLD

- Check the cups are warm. You can heat your cups by pouring hot water into them, and then discarding it, before you start the extraction.
- Too much water may have been drawn from the group head. Let the machine rest and limit the amount of water drawn from it between extractions to ensure the machine remains at temperature.

ESPRESSO TASTES BITTER

- Extraction may be too slow. Check the grind is not too fine. Correct the dose and make it coarser.
- The machine may be dirty. Back flush and clean the group head. Clean the group handles and filter baskets.

TROUBLESHOOTING

ESPRESSO TASTES SOUR

- Extraction may be too fast. Check the grind is not too coarse. Correct the dose and make it finer.

ESPRESSO IS WATERY AND THIN

- Extraction may be too fast. If it is, the crema will be pale. Check the grind is not too coarse. Correct the dose.

ESPRESSO IS BUBBLY

- Water from the machine may be too hot. Let some water run from the group head. Try another extraction.
- Coffee may be too fresh.

LOW OR NO PRESSURE FROM STEAM WAND

- May be due to overuse of the group head or hot water tap. Give the machine time to recover pressure.
- The steam wand may be clogged with dry milk. Remove the nozzle, soak it and unclog the jets with a paper clip.

MILK IS THIN AND BUBBLY

- Ensure the milk is being stretched gradually. If air is introduced too quickly, large bubbles will form.
- Ensure the steam is releasing its full pressure and that all the jets are not blocked.
- May be due to using reheated milk. Try again with fresh milk.

GREEN LIGHT IS FLASHING

- Indicates the water level is low.

RESERVOIR REMOVAL FOR CLEANING

- Remove the reservoir cover and lift the reservoir up with a gentle but firm pull by the two black handles.
- When you are returning the reservoir, ensure you press down so that the tank plug at the bottom is fully engaged.

GAUGE OPERATIONS

- On all machines the left gauge indicates boiler pressure (K).
- On all machines the right gauge indicates pump pressure (L).
- On the R-CINQUANTOTTO and R 60V, the right hand gauge indicates the service boiler pressure.



Mozzafiato
Evoluzione R

DICHIARAZIONE DI CONFORMITÀ UE
- EU DECLARATION OF CONFORMITY
DÉCLARATION DE CONFORMITÉ EU
- EU-KONFORMITÄTSEKTLÄRUNG
DECLARACIÓN DE CONFORMIDAD EU
- DECLARAÇÃO DE CONFORMIDADE EU

Rocket Milano S.r.l.

Via E. Curiel 13
 20060 LISCATE
 (MI) - ITALY

- come costruttore di MACCHINE PER CAFFÈ, dichiara che il prodotto:
- being the manufacturer of COFFEE MACHINES, hereby declares that the product:
- en tant que constructeur de MACHINES A CAFE, déclare que le produit:
- erklärt als Hersteller von KAFFEEMASCHINEN, daß das Gerät:
- como fabricante de CAFETERAS, declara que el producto:
- como fabricante de MÁQUINAS DE CAFÉ, declara que a máquina:

R60 V - R CINQUANTOTTO - R 58
GIOTTO CRONOMETRO R - GIOTTO CRONOMETRO V
MOZZAFIATO CRONOMETRO R - MOZZAFIATO CRONOMETRO V
GIOTTO EVOLUZIONE R - GIOTTO TYPE V
MOZZAFIATO EVOLUZIONE R - MOZZAFIATO TYPE V
PORTAVIA

- *al quale si riferisce questa dichiarazione è conforme ai requisiti essenziali applicabili delle seguenti DIRETTIVE e REGOLAMENTI e successive modifiche e integrazioni:*
- *to which this declaration refers, complies with the applicable essential requirements of the following DIRECTIVES and REGULATIONS and subsequent amendments:*
- *auquel se réfère cette déclaration est conforme aux exigences essentielles applicables des DIRECTIVES et RÈGLEMENTS et modifications et ajouts successifs:*
- *auf welches sich diese Erklärung bezieht, gemäß den folgenden EG-Vorschriften gebaut ist VORSCHRIFTEN und REGELUNGEN sowie nachfolgenden Änderungen und Ergänzungen:*
- *al que se refiere esta declaración es conforme con los requisitos esenciales aplicables de las siguientes DIRECTIVAS y REGLAMENTOS y siguientes modificaciones y correcciones:*
- *referida nesta declaração, é conforme com os requisitos essenciais aplicáveis das seguintes DIRECTIVAS e REGULAMENTOS e sucessivas modificações e integrações:*

2014/68/UE Direttiva attrezzature a pressione (PED) con applicata l'esclusione al Capitolo 1 Articolo 1 Par. 2 (f) - Directive of pressure equipment (PED) with applied the exclusion to Chapter 1 Article 1 Par. 2 (f) - Directive sur les équipements sous pression (PED) avec exclusion appliquée au Chapitre 1 Article 1 Par. 2 (f) - Richtlinie über die Bereitstellung von Druckgeräten (PED) mit angewandtem Ausschluss von Kapitel 1 Artikel 1 Abs. 2 (f) - Directiva sobre equipos a presión (PED) con exclusión aplicada al Capítulo 1 Artículo 1 Par. 2 (f) - Diretiva de equipamento sob pressão (PED) com a exclusão aplicada ao Capítulo 1 Artigo 1 Par. 2 (f)

2014/30/UE Direttiva compatibilità elettromagnetica EMC - Electromagnetic compatibility EMC Directive - Directive de compatibilité électromagnétique EMC Richtlinie elektromagnetische Verträglichkeit EMV - Directiva compatibilidad electromagnética EMC. Directiva sobre a compatibilidade electromagnética EMC

2014/35/UE Direttiva bassa tensione - Low voltage Directive - Directive de basse tension - Niederspannungsrichtlinie - Directiva baja tensión - Directiva sobre baixa tensão

2012/19/UE Direttiva RAEE - WEEE Directive - Directive DEEE - Directiva RAEE - Directiva RAEE

2011/65/UE Direttiva RoHS - RoHS Directive - Directive RoHS - RoHS-Richtlinie - Directiva RoHS

1935/2004/EU Regolamento sui materiali a contatto con i prodotti alimentari - Regulation on food contact materials - Règlement sur les matériaux en contact avec les denrées alimentaires - Regelung für Materialien, die mit Lebensmitteln in Kontakt kommen - Reglamentos sobre los materiales en contacto con los productos alimenticios - Regulamento sobre materiais em contacto com os produtos alimentares

- *in conformità alle norme* **EN 60335-1:2012 / AC:2014 / A11:2014 / A13:2017 / A1:2019 / A14:2019 / A2:2019 / A15:2021**
- *in compliance with standards* **EN 60335-2-15:2016 / A11:2018**
- *en conformité avec les normes* **EN 62233:2008 / AC:2008**
- *gemäß den Vorsch* **EN 55014-1:2017 / A11:2020**
- *en conformidad de las normas* **EN 55014-2:1997 / A1:2001 / A2:2008 / AC:1997**
- *em conformidade com as normas* **EN 61000-3-2:2014 - EN 61000-3-3:2013**

L'incarico di costituire e conservare il fascicolo tecnico è affidato alla Rocket Milano S.r.l. in Via E. Curiel, 13 - 20060 LISCATE (MI) - ITALIA.

The Rocket Milano S.r.l., Via E. Curiel, 13 - 20060 LISCATE (MI) - ITALY is responsible for establishing and maintaining the technical file.

La tâche de constituer et de conserver le dossier technique est confiée à la Rocket Milano S.r.l. in Via E. Curiel, 13 - 20060 LISCATE (MI) - ITALIE

Die Aufgabe der Einrichtung und Aufrechterhaltung des technischen Unterlagen anvertraut ist, die Rocket Milano S.r.l. in Via E. Curiel, 13 - 20060 LISCATE (MI) - ITALIEN

La responsabilidad de elaborar y conservar el expediente técnico corresponde alla Rocket Milano S.r.l. in Via E. Curiel, 13 - 20060 LISCATE (MI) - ITALIA

A responsabilidade de criar e guardar o fascículo técnico é confiada à la Rocket Milano S.r.l. in Via E. Curiel, 13 - 20060 LISCATE (MI) - ITALIA

La presente dichiarazione perde la sua validità nel caso in cui l'apparecchio venga modificato senza espressa autorizzazione del costruttore oppure se installato o utilizzato in modo non conforme a quanto indicato nel manuale d'uso e nelle istruzioni - This declaration is null and void if the machine is modified without the express authorization of the manufacturer or if improperly installed and used in a way that does not comply with indications in the users' manual and the instructions - La présente déclaration sera considérée comme nulle et non avenue si l'appareil est modifié sans l'autorisation du fabricant ou si l'appareil est installé ou utilisé de façon non conforme à ce qui est indiqué dans le manuel d'utilisation et d'installation - Die vorliegende Konformitätserklärung verliert ihre Gültigkeit, falls das Gerät ohne ausdrückliche Genehmigung des Herstellers modifiziert werden sollte oder falls es nicht gemäß den im Bedienungs- und Wartungshandbuch aufgeführten - La presente declaración pierde su validez en el caso de que el aparato sea modificado sin expresa autorización del constructor, o bien si ha sido instalado o utilizado de forma no conforme a lo indicado en el manual de uso y en las instrucciones - A presente declaração deixa de ter validade no caso em que o aparelho seja modificado sem autorização do construtor ou se instalado ou utilizado de maneira não conforme ao indicado no manual de uso e nas instruções.


CEO - Daniele Berenbruch

Data di emissione - Date of Issue - Date d'émission
Ausstellungsdatum - Fecha de emisión - Data de emissão
Liscate, 07/01/2025


ROCKET
ESPRESSO MILANO





ROCKET MILANO S.R.L.
VIA CURIEL 13
20060 LISCATE
MILAN, ITALY

+39 02 953 513 34
WWW.ROCKET-ESPRESSO.COM